

2 如果没有正式购买软件则会出现:如下图标,确认即可。如果有软件狗,则插上软件狗后,就不 出现次图标了



3, 进入软件后先进入"通讯"--- "串口设置" 下拉框



4,设置串口号,然后存储返回

通讯						-		
通讯设置 循环显示各测量通道						友雄 海同	ma	35 m
「 」 「计算机RS232串口设置」」	仪表:	地址,	/仪表道	围道内址/工位·	号设置 ————————————————————————————————————	计确 赵四	42.41	
串行端口亏	1	注1:	注2:	注意	: 有故障或不使用的通	道必需去随	余!	
3 - 1	序号	地址1	地址2	返回	工位号(测量点说明)	上限A1	下限A2	上上限/
·通讯波特率 9600	001	1	0		扭矩	999999	-999999	99999
	002	1	2		转速	999999	-999999	99999
	003	1	4		功率	999999	-99999	99999
搜索一次各测量通道	004					999999	-999999	99999
	005					999999	-999999	99999
循环显示各测量通道	006					999999	-999999	99999
	007					999999	-99999	99999
	008					999999	-999999	99999
	009					0	0	0
	010					0	0	0
	011					0	0	0
	012					0	0	0
	013					0	0	0
	014					0	0	0
	015					0	0	0
	016					0	0	0

5, 然后退出 m400 重新进入, 点击"欢迎进入本系统"



Ся М400хжяяевтахна и слава и констрактивности и слав И слава и сла



数据通讯连接完成,其他功能可以参考安装包下目录下的软件说明

6选择 实时数值显示下拉框 --- 实时值 1-4 路